


Trip Adjustment

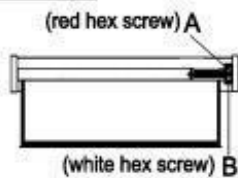

"A" controls the range of extension
"B" controls the range of retraction

You can fine tune how far the screen opens or retracts

1. To reduce the black border on top of the screen, turn A clockwise.
2. To increase the black border on top of the screen, turn A counter-clockwise.
3. To retract the screen more into the metal case, turn B counter-clockwise.
4. If screen keeps retracting/vibrating (or even reversing downward) when it reaches the top, turn B clockwise.

Notes: When fine turning, try "2 full turns" then check the result, try more "2 full turns" if necessary

An over-adjusted screen can go the opposite way before it stops. for example, when you press DOWN button, it may go up first then to down, or do down first then goes up.

Operating Instruction



Electric Screen



Methods of Installation



Wall Mount

- The screen can be wall-mounted with the fitting provided. Use the pre-drilled holes to mark the desired position on your wall, ensure that the wall is clean and free of dust prior to installation.
- Mount the screen from the key hole located on back of the screen's left and right the cover.



Ceiling Mount

- You may also hang the screen to the ceiling with hooks (not included).




Tripod Mount


- The screen can also be used on the tripod. (Optional)

Operating Instructions

● Remote Control

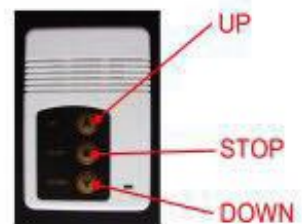

● Wired inline Control (Optional)

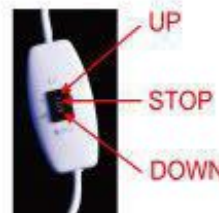

- To open the screen, press the DOWN button once
- To retract the screen, press the UP button once.
- You may press STOP button to freeze the screen at its position.

Please refer to Section "Trip Adjustment" below for information on how to fine tune how far the screen opens & retracts.