

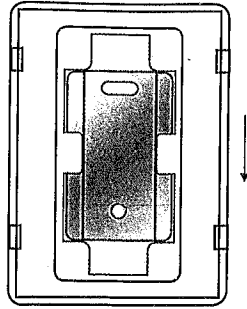


Installs the schematic drawing

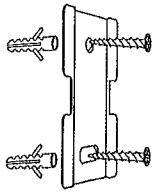

Wiring schematic drawing

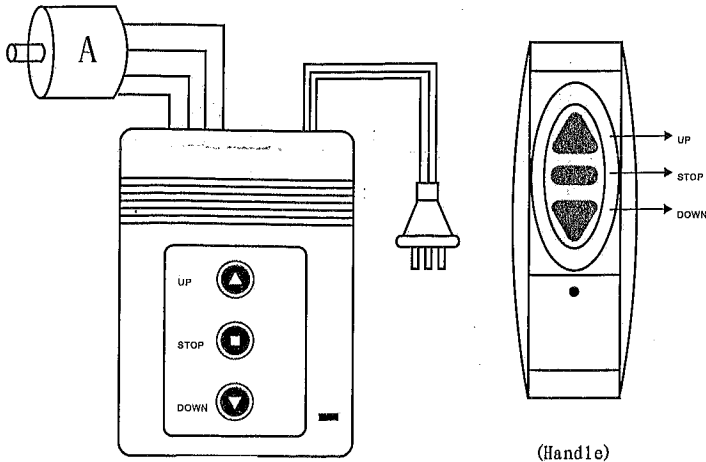

(Receiver)

(Handle)

Alternator

Up wire colour ()

Middle Wire colour ()


Down wire colour ()

Earth wire colour ()

Electromotor Remote Controller

INSTRUCTION

(Please read this instruction before you use the remote control)

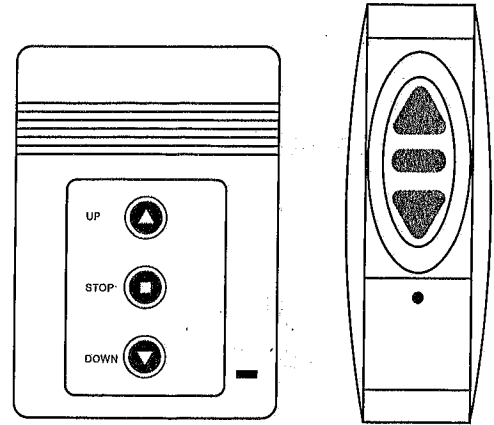

I. Product Particular

1. Perfect design and nice appearance with imported collect circuit and advanced technology
2. Low rate of repeated code, safe and reliable as adopt the circuit of high digital coding
3. Combined remote with hand control and easy installation
4. The receiver is a learning-type and it can learn 40 handles

II. Applicability

Apply to the control of the direction and power off for alternator of pressure AC220V/110V/50-60Hz, (It can be customized for other description), such as electric screen, curtain, lifting rack, etc.

III. Technical Parameter

1. Pressure: AC220V/110V±10%
2. Load Power: < 500W
3. Remote Frequency: RF: 315/433MHZ IR: 38KHZ
4. Remote Controlling Distance: RF: ≤ 50M(open field) IR: ≤ 8M±15°

IV. Installation & Operation

1. Installation: Install every part and connect the wires according to the wiring diagram. (need installed by professional)

2. Operating: Connected with the power, and 3 short discontinuous rings will burst out. That means there is no acquired content in this remote controller. Then press any key in the handle within 8 seconds, a long consecutive ring will be heard. That means this remote controller has acquired the related content and it will start regular work in 8 seconds. (Configured when leaving the factory. No need to operate again.)

Transfer the controlling handles into exercised ones, to keep pressing "STOP" key for 5 seconds. When hearing 2 short discontinuous rings, press any key in the handles, then a long consecutive ring will burst out that means it has acquired the related content. In this way, the receiver could be controlled by more than one remote control handles.

Normally, you need only to press the keys in the receiver or remote control handles according to the using method. When transferring UP or Down status to DOWN or UP one, to press the related key twice (PAUSE for the first time). If there is no action for 5 minutes or longer, the receiver will stop working and cut off the switch automatically.

Keep pressing STOP key for more than 15 seconds, 3 short discontinuous rings will burst out and the learned content in the controller is deleted at the same time. This is to prevent this remote controller embazzled or handles are lost.

V. Fall time setting and cancel (this function can be selected):

Please must use the remote control handles when performing the memorizing function. Press Down button, electromotor will go down. When reaching your required position, press STOP and DOWN button at the same time. Press UP and Down button at the same time to clear the memory.

VI. Warnings

1. If the alternator does not work after installation, try to exchange the direction of the wire or turn to the supplier to get professional advice.
2. Please change the battery (23A 12V) if the controlling distance is shorten or not working